

Mikrowellen-Reiskocher

Art.-Nr. 6061295

BEDIENUNGSANLEITUNG

Vielen Dank, dass Sie sich für den Kauf dieses Produkts entschieden haben. Bitte lesen Sie diese Bedienungsanleitung aufmerksam durch, bevor Sie das Gerät in Betrieb nehmen, und bewahren Sie die Anleitung für späteres Nachschlagen sicher auf.



Kundenservice:

Weltbild


Sollten Sie Fragen zu dem Artikel haben, wenden Sie sich bitte an unseren Kundenservice: Weltbild GmbH & Co. KG, Werner-von-Siemens Str.1, 86159 Augsburg

Deutschland **Telefon:** 01806 354 360 **E-Mail:** info@weltbild.com
(Mo. – Fr. 7:00 - 22:00 Uhr; Sa. 7:00 - 20:00 Uhr;
20 Cent/Anruf Festnetz; max. 60 Cent/Anruf Mobilfunk)

Schweiz **Telefon:** 0848 840 131 **E-Mail:** kundendienst@weltbild.ch
(Mo. – So. 7:00 - 22:00 Uhr)

Österreich **Telefon:** 0662 / 65 75 88 **E-Mail:** kundenservice@weltbild.at

1

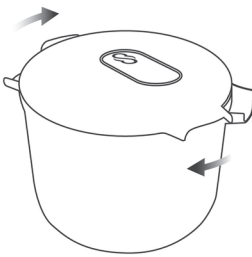


Schritt 1
Öffnen

2



Schritt 2
Reis und Wasser

3

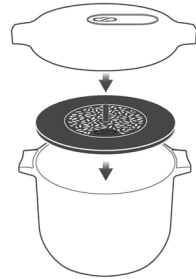


Schritt 3
Kochsieb und
Deckel

4




Schritt 4
Dampföffnung

5

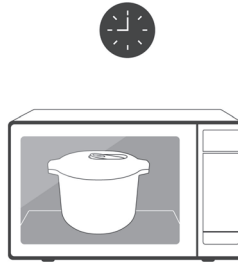

Schritt 5
Kochen in der
Mikrowelle

6

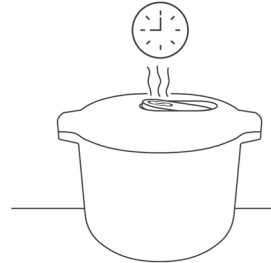

Schritt 6
Ein wenig
warten

7



Schritt 7
Genießen



Basmatireis

	1 Person	2 Personen	3 Personen
Reismenge	1/3 Becher	2/3 Becher	1 Becher
Wasser	150 ml	200 ml	300 ml
Kochzeit	10 Min.	10 Min.	12 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.
Servieren	1 Person	2 Personen	3 Personen
Reismenge	1 1/3 Becher	1 2/3 Becher	2 Becher
Wasser	400 ml	600 ml	700 ml
Kochzeit	14 Min.	14 Min.	15 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.

Jasminreis

	1 Person	2 Personen	3 Personen
Reismenge	1/3 Becher	2/3 Becher	1 Becher
Wasser	120 ml	140 ml	200 ml
Kochzeit	10 Min.	10 Min.	12 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.
Servieren	1 Person	2 Personen	3 Personen
Reismenge	1 1/3 Becher	1 2/3 Becher	2 Becher
Wasser	270 ml	340 ml	400 ml
Kochzeit	15 Min.	15 Min.	15 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.

Langkornreis

	1 Person	2 Personen	3 Personen
Reismenge	1/3 Becher	2/3 Becher	1 Becher
Wasser	150 ml	170 ml	215 ml
Kochzeit	10 Min.	12 Min.	13 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.
Servieren	1 Person	2 Personen	3 Personen
Reismenge	1 1/3 Becher	1 2/3 Becher	2 Becher
Wasser	300 ml	400 ml	470 ml
Kochzeit	15 Min.	15 Min.	15 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.

Klebreis

	1 Person	2 Personen	3 Personen
Reismenge	1/3 Becher	2/3 Becher	1 Becher
Wasser	150 ml	200 ml	300 ml
Kochzeit	8 Min.	12 Min.	16 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.
Servieren	1 Person	2 Personen	3 Personen
Reismenge	1 1/3 Becher	1 2/3 Becher	2 Becher
Wasser	300 ml	400 ml	425 ml
Kochzeit	16 Min.	16 Min.	16 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.

Sushireis

	1 Person	2 Personen	3 Personen
Reismenge	1/3 Becher	2/3 Becher	1 Becher
Wasser	75 ml	150 ml	220 ml
Kochzeit	12 Min.	12 Min.	12 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.
Servieren	1 Person	2 Personen	3 Personen
Reismenge	1 1/3 Becher	1 2/3 Becher	2 Becher
Wasser	280 ml	350 ml	400 ml
Kochzeit	13 Min.	15 Min.	15 Min.
Auskühlzeit	5 Min.	5 Min.	5 Min.

Eigenschaften

- 2 in 1: Reiskocher zum Kochen und Servieren.
- 2 Liter Fassungsvermögen.
- Lüftungsöffnung – kein herausspritzendes heißes Wasser.
- Gerät kann zum Reinigen komplett zerlegt werden.
- Geeignet für Geschirrspüler, Gefrierschrank und Mikrowellengerät.
- BPA-frei.

Sicherheitshinweise

- Bitte niemals den leeren Reiskocher vorheizen.
- Mikrowellengeräte sind unterschiedlich. Bitte stellen Sie die passende Kochzeit je nach verwendetem Gerät ein.
- Der Reisbehälter und dessen Inhalt können sehr heiß werden.
- Die hier empfohlenen Kochinformationen sind nur als Richtlinien zu betrachten, da Mikrowellengeräte unterschiedlich sind.
- Tauchen Sie das Gerät niemals in kochendes Wasser.
- Erhitzen Sie das Gerät nicht in einem Backofen.
- Stellen Sie das Gerät nicht in die Nähe von offenem Feuer oder anderen Hitzequellen.

Altgeräte-Entsorgung

Dieses Produkt am Ende der Lebensdauer nicht in den normalen Haushaltsabfall geben, sondern an einem Recycling-Sammelpunkt für elektrische und elektronische Geräte abgeben. Das Symbol auf dem Produkt, der Bedienungsanleitung oder der Verpackung weist darauf hin.

Kundenservice:

Weltbild

Sollten Sie Fragen zu dem Artikel haben, wenden Sie sich bitte an unseren Kundenservice: Weltbild GmbH & Co. KG, Werner-von-Siemens Str. 1, 86159 Augsburg

Deutschland **Telefon:** 01806 354 360 **E-Mail:** info@weltbild.com
(Mo. – Fr. 7:00 – 22:00 Uhr; Sa. 7:00 Uhr – 20:00 Uhr;
20 Cent/Anruf Festnetz; max. 60 Cent/Anruf Mobilfunk)

Schweiz **Telefon:** 0848 840 131 **E-Mail:** kundendienst@weltbild.ch
(Mo. – So. 7:00 – 22:00 Uhr)

Österreich **Telefon:** 0662 / 65 75 88 **E-Mail:** kundenservice@weltbild.at

Mikrowaves Rice Cooker

Art.-Nr. 6061295

INSTRUCTION MANUAL

Thank you for purchasing our quality product. Please read all the instructions, pre-cautions, and information in this manual before using the device to quickly familiarise yourself with it and to be able to make full use of its functions.

Keep this instruction manual in a safe place for future reference.



Customer service:

If you have any questions regarding your device, please do not hesitate to contact our customer service: Weltbild GmbH & Co. KG, Werner-von-Siemens Str. 1, 86159 Augsburg

Weltbild

Germany

phone: 01806 354 360

e-mail: info@weltbild.com

(mo. - fr. 7:00 - 22:00; sa. 7:00 - 20:00;
20 cent per call landline; max. 60 cent per call mobile)

Switzerland

phone: 0848 840 131

e-mail: kundendienst@weltbild.ch


(Mo. - So. 7:00 - 22:00 Uhr)

Austria

phone: 0662 / 65 75 88

e-mail: kundenservice@weltbild.at

1

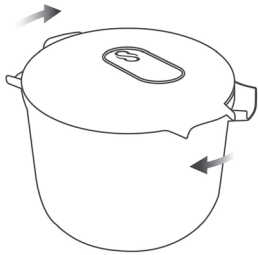


Step 1
Open

2



Step 2
Rice and Water

3

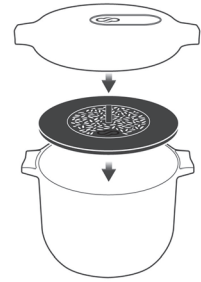


Step 3
Colander and Cover

4




Step 4
The Vent

5

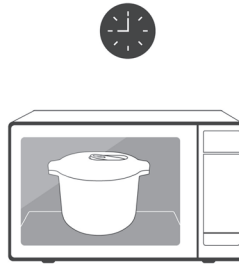

Step 5
Cook in Microwave

6

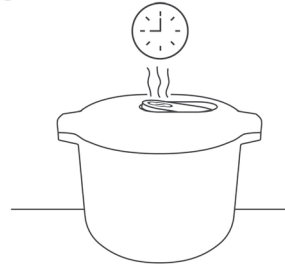

Step 6
Wait a Bit

7



Step 7
Enjoy!



Basmati Rice			
	1/3 cup	2/3 cup	1 cup
	150 ml	200 ml	300 ml
	10 mins	10 mins	12 mins
	5 mins	5 mins	5 mins
	1 person	2 people	3 people
	1 ^{1/2} cup	1 ^{1/2} cup	2 cup
	400 ml	600 ml	700 ml
	14 mins	14 mins	15 mins
	5 mins	5 mins	5 mins

Jasmine Rice			
	1/3 cup	2/3 cup	1 cup
	120 ml	140 ml	200 ml
	12 mins	12 mins	15 mins
	5 mins	5 mins	5 mins
	1 person	2 people	3 people
	1 ^{1/2} cup	1 ^{1/2} cup	2 cup
	270 ml	340 ml	400 ml
	15 mins	15 mins	15 mins
	5 mins	5 mins	5 mins

Long Grain Rice			
	1/3 cup	2/3 cup	1 cup
	150 ml	170 ml	215 ml
	10 mins	12 mins	13 mins
	5 mins	5 mins	5 mins
	1 person	2 people	3 people
	1 ^{1/2} cup	1 ^{1/2} cup	2 cup
	300 ml	400 ml	470 ml
	15 mins	15 mins	15 mins
	5 mins	5 mins	5 mins

Sticky Rice			
	1/3 cup	2/3 cup	1 cup
	150 ml	200 ml	300 ml
	8 mins	12 mins	16 mins
	5 mins	5 mins	5 mins
	1 person	2 people	3 people
	1 ^{1/2} cup	1 ^{1/2} cup	2 cup
	300 ml	400 ml	425 ml
	16 mins	16 mins	16 mins
	5 mins	5 mins	5 mins

Sushi Rice			
	1/3 cup	2/3 cup	1 cup
	75 ml	150 ml	220 ml
	12 mins	12 mins	12 mins
	5 mins	5 mins	5 mins
	1 person	2 people	3 people
	1 ^{1/2} cup	1 ^{1/2} cup	2 cup
	280 ml	350 ml	400 ml
	13 mins	15 mins	15 mins
	5 mins	5 mins	5 mins

Features

- Can be used to cook a wide variety of rices.
- Steam release vent for splatter-free heating.
- All parts can be disassembled for cleaning.
- Dishwasher, freezer, and microwave safe.
- BPA-free.

Safety Instructions

- Please do not preheat empty cooker.
- All microwave ovens vary; adjust cooking according to the particular appliance.
- The appliance and its content may become very hot after cooking.
- The suggested cooking information is a guideline only, as all microwave ovens vary.
- Do not immerse the appliance into boiling water.
- Do not heat the appliance in oven.
- Do not put the appliance near heat sources or open flames.
- Remove the cover and drainer when washing in the dishwasher.

Disposal and Environmental Protection

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems for electric and electronic appliances.

Customer service:

If you have any questions regarding your device, please do not hesitate to contact our customer service: Weltbild GmbH & Co. KG, Werner-von-Siemens Str. 1, 86159 Augsburg

Weltbild

Germany

phone: 01806 354 360

e-mail: info@weltbild.com

(mo. – fr. 7:00 - 22:00; sa. 7:00 - 20:00;
20 cent per call landline; max. 60 cent per call mobile)

Switzerland

phone: 0848 840 131

e-mail: kundendienst@weltbild.ch

(Mo. – So. 7:00 - 22:00 Uhr)

Austria

phone: 0662 / 65 75 88

e-mail: kundenservice@weltbild.at